

RECO SURFACES

MADE IN BRITAIN

How to fit offset tiles

Three great options for fitting offset tiles patterns


01. Cut out

02. Butt joint

03. 'H' trim

01. Cut out

The offset tile panels can be easily cut to join together similar to traditional tiles. By employing a handheld multi-tool, you can precisely remove every other tile, ensuring the panels fit together seamlessly like a jigsaw puzzle. In the absence of a handheld multi-tool, an alternative method involves drilling two holes in each corner of the tile to be cut, followed by inserting a jigsaw cutter to remove the tile. The holes in the corners provide ample space for the blade to maneuver around corners. This method ensures the panels maintain the appearance of individual tiles effectively.

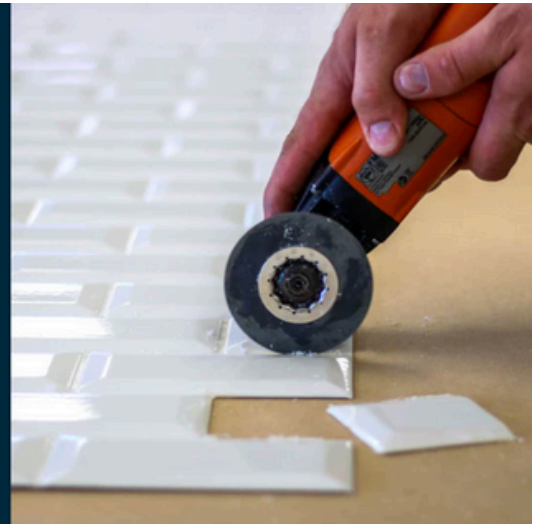

01. Cut out

02. Butt joint

03. 'H' trim

02. Butt joint

The panels have a flat edge and can be simply butted up to one another with silicone in the join. However, this does result in a visible line.



01. Cut out

02. Butt joint

03. 'H' trim

03. 'H' trim

An 'H' trim can be purchased from Reco or your local DIY or Tile store. This can be fitted behind the panels to cover the join. This does however mean that it looks a little less like real tiles.

